


INSTRUCTIONS FOR USE AND INSTALLATION TOASTER CT 3000 B

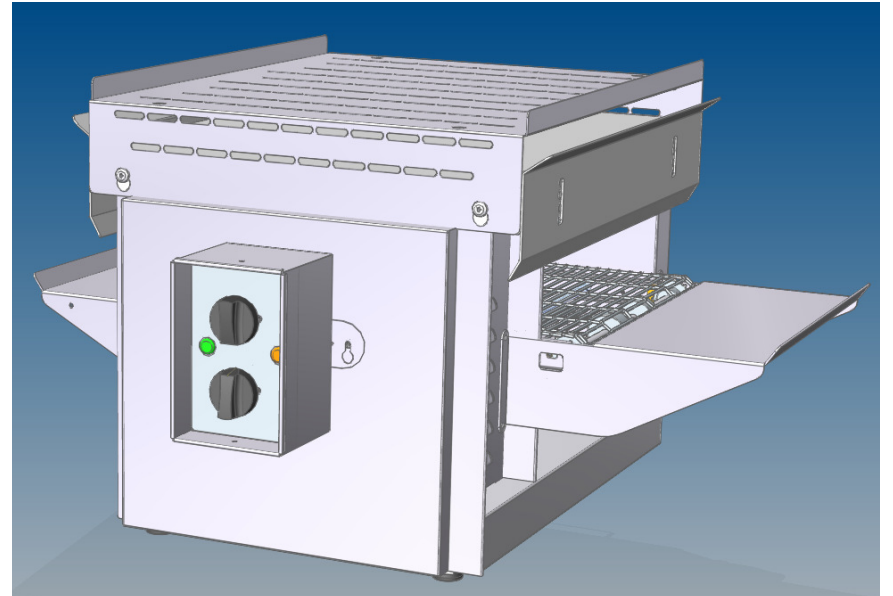

Made in France

TOASTER CT 3000 B

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment

1. SECURITY INSTRUCTIONS

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumstances of security must always be noticed, such as:

- Take into account the instructions and keep it systematically with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- Never move the appliance when it is working or when the surfaces of cooking are still hot.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the appliance, the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, his after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- At the end of cooking, before cleaning the appliance, do not forget to disconnect it.

2. CONTENTS OF CARDBOARD PACKAGING

Device: A toaster

- Accessories:
- A tray N° 2 (loading) + screws
 - A tray N°1 (unloading) + screws
 - Two small trays

VUE

- A brush
- The present note

See exploded views for CT 3000 B at the end of the document

3. CONFORMITY OF USE


Use the appliance only to toast bread, brioche, bagels, waffles, baguettes, bruschettas, buns, small pizzas, quiches, panini...

4. WAY OF FUNCTIONING

Ideal for intensive use in bakery, fast-food chains and franchises ! This conveyor oven with infrared quartz tubes (1050°C) cooks non-stop and with no preheating every kind of hot snacks : **1'30 min in average !**

This toaster enables to reheat viennoiseries in few seconds or to keep them warm thanks to the holed top tray.

To turn on the toaster, just action the commutator (n°1 on picture) on the desired position (50% or 100 %). The orange pilot light (n°4 on picture) ignites. Turn on the speed regulator knob (n°3 on picture) according to the desired cooking time (from 0 to 10).

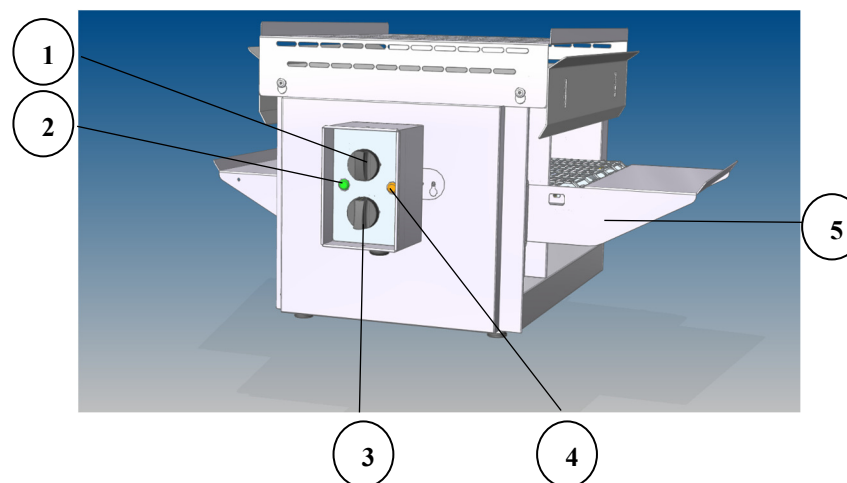

- | | | | |
|---|--------------------|---|---------------------|
| 1 | Commutator | 2 | On/off pilot light |
| 3 | Speed regulator | 4 | Control pilot light |
| 5 | Tray N°2 (loading) | | |

5. FUNCTIONING / MANIPULATION

SCHEMA

a) Installation / assembly:

- Unpack carefully the device of its packaging.
- Place it on a plane and heatproof surface.
- Never place the device near a wall or near a partition made of combustible materials even if it is very well isolated.
- A distance of minimum 10 cm with the partition or the wall is necessary.
- **Never plug the toaster on a multi socket adaptor.**
- **Plug the toaster on a 16A plug minimum.**
- **Never expose the plug to a heating source.**

b) First starting:

During the first use, warm your machine up outside to evacuate residual smokes of manufacturing oil from the metallic parts. This may emit a slight smell for a few moments.

First cleaning

Clean the device before the first use. (See 6. Cleaning)

Connection of the device

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged. If necessary, it has to be replaced by the manufacturer, its after sale service or any qualified person to avoid any risk.
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a plug connected with the earth.
- The device is connected.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person .

Exclusion clauses of the guarantee

Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.

c) Use of device :

Elements of command and display

Command/Display	Function
Commutator 4 positions (n° 1 on picture) : Position 0 Position 50% Position 100%	Stop All the tubes warm (half power) All the tubes warm (full power)
Green pilot light (n°2 on picture)	On/off
Orange pilot light (n°4 on picture)	Machine is on
Speed regulator (n°3 on picture)	Minimum to maximum power

Putting on

Turn on the commutator (n°1 on picture) on the wished position according to the desired power.

The control pilot light (n°4 on picture) ignites.

Turn on the speed regulator knob (n°3 on picture) according to the desired cooking time

Temperature setting

Set the power desired by positioning the commutator (n°1 on picture) to the wished position.

Stopping the appliance

Set the commutator (n°1 on picture) on 0.

Set the speed regulator (n°3 on picture) on 0.

Let the device cool

Disconnect the power cable.

Clean the appliance. (see 6. Cleaning)

d) Breakdown / repair:

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

6. CLEANING AND MAINTENANCE

- Disconnect the device.
- Let cool completely the device before any technical intervention or cleaning.
- Take the croissants support off the top of the oven.
- Remove the loading and unloading trays (front and back) to wash them in the dishwasher.
- Brush the grid with the supplied brush.
- Clean the top and the external surfaces of the oven with a soft cleaning product. Do not spray the cleaning product directly on the stainless steel but use a dish mop. Let act 5 min. Rinse the dish mop into clear water and sweep it on all the outside walls. Let dry.
- Never clean the quartz tubes when they are hot
- Avoid touching quartz tubes with your fingers but use a cloth moistened with spirit.
- Clean regularly the external walls of your device with warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge.
- Never clean the device under a water jet, the infiltrations would risk to damage it in an irreparable way.
- Never immerse the device, the cord or the plug in the water or quite other liquid to avoid any electric shock.
- During a prolonged non-use, we recommend you strongly to keep the device shielded from the humidity.


7. TECHNICAL SPECIFICATIONS

Model	CT 3000 B
Outside dimensions	470x720x385 mm
Weight	22 Kg
Power	3000 W
Nb of quartz tube	8
Current	13 A
Voltage	220-240 V ~

Wires colours correspondence

Phase
Neutral
Earth

Brown/Black/Grey
Blue
Yellow-Green

The equipotential connection marked by this symbol  must be linked with the equipotential conductive connection of your installation by means of a minimum conduction of a 2.5 mm² section.

8. NORMS AND LEGALS DISPOSALS

The device is conform to :

IEC/EN 60335-1
IEC/EN 60335-2-48
EN 55014-1 + 55014-2
EN 61000-3-2 + 61000-3-3

9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives:

2002/96/CE (DEEE) N°34270064800021
2002/95/CE (ROHS)
2066/95 CE
2004/108 CE



Reach rule

Never put the device among household waste.

The device must be put down in a centre of recycling for the electric equipments.

The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

10. GUARANTEE

Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.