

## INSTRUCTIONS FOR USE AND INSTALLATION TOASTER CT 540



**Made in France**

# TOASTER CT 540

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which allows the best technical qualities with a big user-friendliness. We wish you the biggest contentment

## 1. SECURITY INSTRUCTIONS

 
Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumstances of security must always be noticed, such as:

- Take into account the instructions and keep it systematically with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- Never move the appliance when it is working or when the surfaces of cooking are still hot.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the electrical cord in contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the appliance, the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, his after sale service or persons of similar skills to avoid any risk.
- Entrust repairs only to a skilled person.
- Use only spare parts of origin.
- At the end of cooking, before cleaning the appliance, do not forget to disconnect it.

## 2. CONTENTS OF CARDBOARD PACKAGING

Device: A toaster

- Accessories:
- A rear reception grid
  - A tray
  - A removable drawer

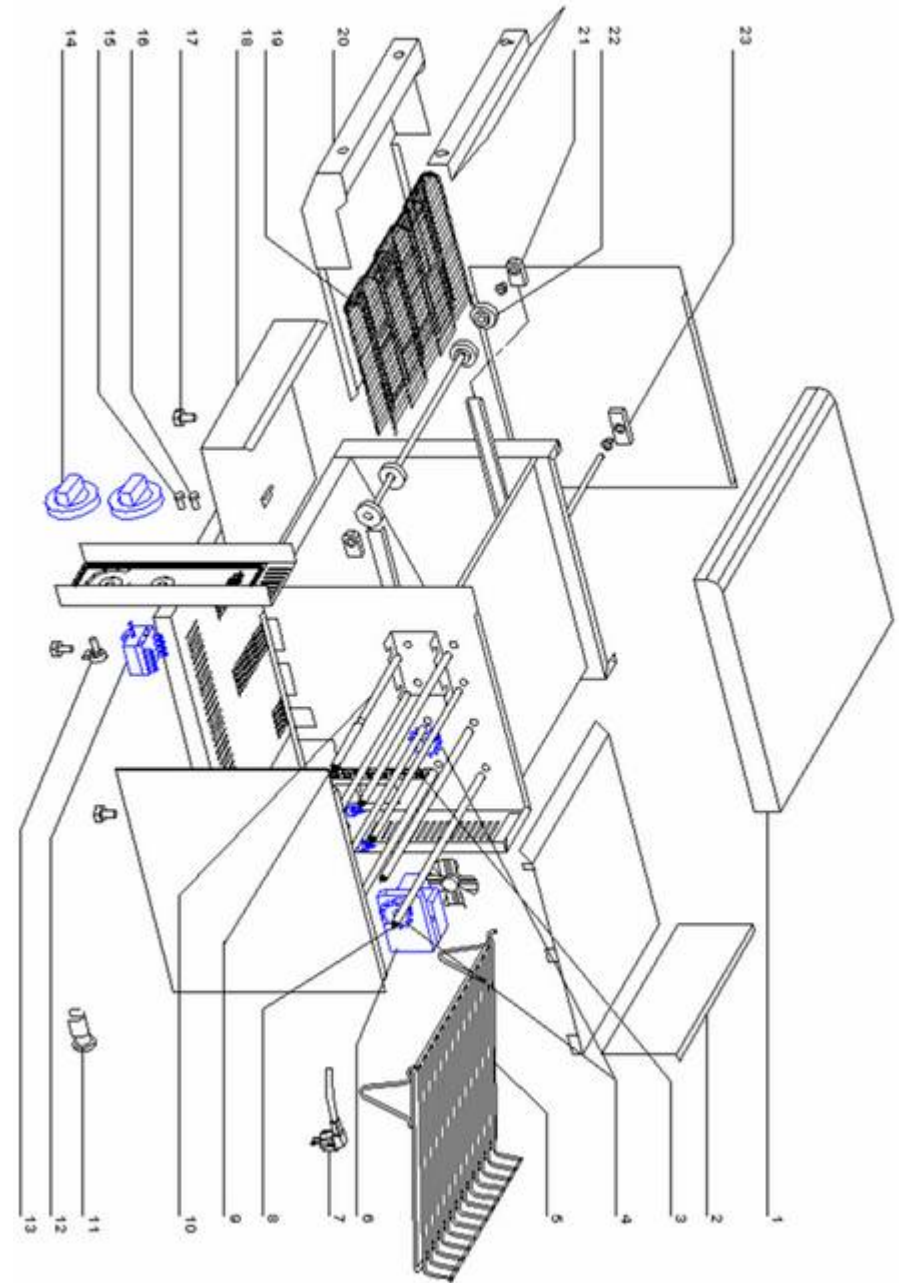

Nomenclature **CT 540**  
Spare parts **CT 540**

| Rep | Code    | Qty | Pièce               | Spare part             |
|-----|---------|-----|---------------------|------------------------|
| 1   | 57031   | 1   | Toit                | Top hot casing         |
| 2   | 57008SE | 1   | Réflecteur amovible | Removable reflector    |
| 3   | B07020  | 1   | Chaîne              | Chain                  |
| 4   | B01004  | 4   | Pignon              | Gear w heel            |
| 5   | F01046  | 1   | Grille              | Grid                   |
| 6   | A03038  | 1   | Moteur              | Motor                  |
| 7   | C03013  | 1   | Cordon avec prise   | Cord with plug         |
| 8   | D01044  | 4   | Résistance haute    | Top heating element    |
| 9   | D01045  | 4   | Résistance basse    | Bottom heating element |
| 10  | D04015  | 8   | Tube quartz         | Quartz tube            |
| 11  | A10002  | 1   | Serre cable         | Cord closer            |
| 12  | A01001  | 1   | Commutateur         | Commutator             |
| 13  | A04005  | 1   | Potentiomètre       | Potentiometer          |
| 14  | A14078  | 2   | Bouton              | Knob                   |
| 15  | A08009  | 1   | Voyant vert         | Green pilot light      |
| 16  | A08003  | 1   | Voyant orange       | Orange pilot light     |
| 17  | A13009  | 4   | Pied                | Foot                   |
| 18  | 57004SE | 1   | Ramasse toasts      | Toast tray             |
| 19  | F01045  | 1   | Grille métallique   | Metallic grid          |
| 20  | 57012   | 1   | Tiroir réflecteur   | Reflector drawer       |
| 21  | B03004  | 2   | Palier avant        | Front bearing          |
| 22  | B06035  | 6   | Galet               | Wheel                  |
| 23  | B03003  | 2   | Palier arrière      | Back bearing           |

- A removable reflector for reception of toasts
- The present note

See exploded views for CT 540 at the end of the document

### 3. CONFORMITY OF USE

Use the appliance only to toast bread, brioche, bagels, waffles, baguettes, bruschettas, buns, small pizzas, quiches...

### 4. WAY OF FUNCTIONING

Ideal for breakfast buffet, this heavy duty versatile conveyor toaster toasts from 300 to 540 pieces/h according to the bread .

The back can be removed, for front or pass through operation:

- Front operation to toast bread, brioche, bagels...
- Pass through operation to toast baguettes, Ø 30 bread slices, waffles, garlic bread, buns, small pizzas, quiche...

Preheat your toaster during 5 min on maximum power.

To turn on the toaster, just action the commutator (n°4 on picture) on the desired position (from 2 to 4). The orange pilot light (n°1 on picture) ignites. Turn on the speed regulator knob (n°5 on picture) according to the desired cooking time.

Never use the toaster without its tray (n°6 on picture)



1 Control pilot light

2 Removable reflector

3 On/off pilot light

4 Commutator

5 Speed regulator

6 Tray

## 5. FUNCTIONING / MANIPULATION

### a) Installation / assembly:

- Unpack carefully the device of its packaging.
- Place it on a plane and heatproof surface.
- Never place the device near a wall or near a partition made of combustible materials even if it is very well isolated.
- A distance of minimum 10 cm with the partition or the wall is necessary.
- Remove the protective films

### b) First starting:

During the first use, warm your machine up outside to evacuate residual smokes of manufacturing oil from the metallic parts. This may emit a slight smell for a few moments.

 
### First cleaning

Clean the device before the first use. (See 6. Cleaning)

### Connection of the device

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged. If necessary, it has to be replaced by the manufacturer, its after sale service or any qualified person to avoid any risk.
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a plug connected with the earth.
- The device is connected.

**NB:** in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person .  
après

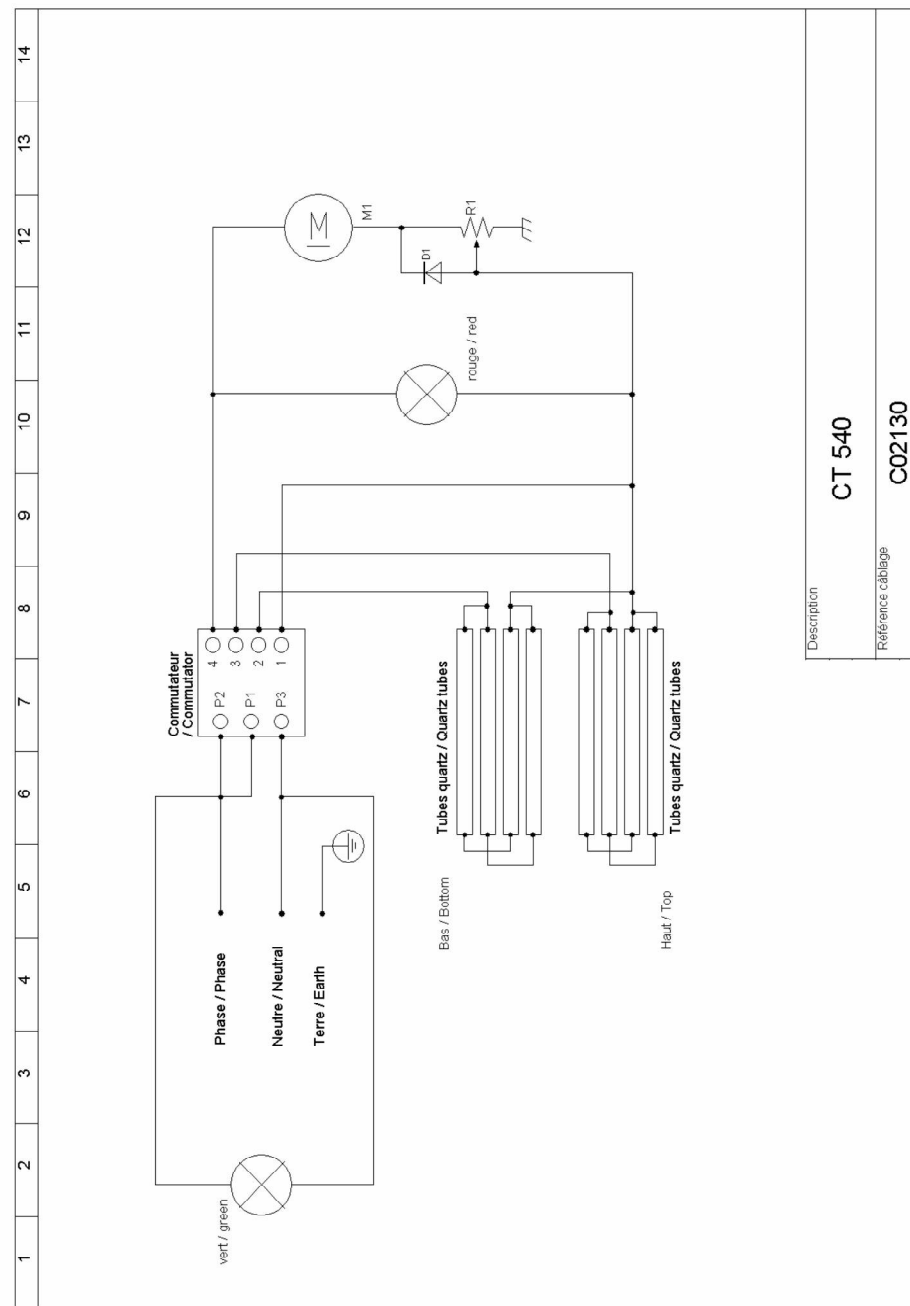

Description

CT 540

Reference câblage

C02130

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

**Exclusion clauses of the guarantee**

**Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.**

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.

**c) Use of device :**

***Elements of command and display***

| Command/Display  | Function  |
|--|---|
| Commutator 4 positions (n° 4 on picture) :<br>Position 1<br>Position 2<br>Position 3<br>Position 4 | Stop<br>Bottom quartz tubes only<br>Top quartz tubes only<br>All the tubes warm |
| Green pilot light (n°3 on picture)   | On/off  |
| Orange pilot light (n°1 on picture)  | Machine is on   |
| Speed regulator (n°5 on picture)   | Minimum to maximum power  |

***Putting on***

Turn on the commutator (n°4 on picture) on the wished position according to the desired power.

The control pilot light (n°1 on picture) ignites.

Turn on the speed regulator knob (n°5 on picture) according to the desired cooking time

***Temperature setting***

Set the power desired by positioning the commutator (n°4 on picture) to the wished position.

 
***Stopping the appliance***

Set the commutator (n°4 on picture) on 0.

Disconnect the power cable.

Clean the appliance. (see 6. Cleaning)

There are two ways of using available according to the position of the removable reflector which enables to receive toasts.

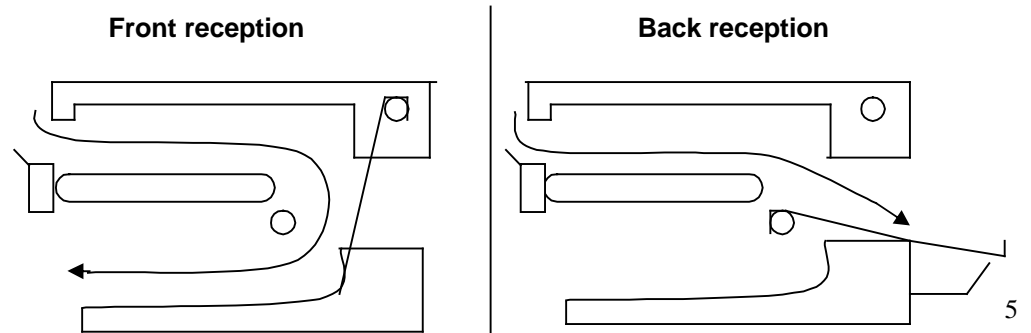

#### **d) Breakdown / repair:**

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

#### **6. CLEANING AND MAINTENANCE**

- Disconnect the device.
- Let cool completely the device before any technical intervention or cleaning.
- Never clean the quartz tubes when they are hot
- Avoid touching quartz tubes with your fingers but use a cloth moistened with spirit.
- Clean regularly the external walls of your device with warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge.
- Never clean the device under a water jet, the infiltrations would risk to damage it in a irreparable way.
- Never immerse the device, the cord or the plug in the water or quite other liquid to avoid any electric shock.
- During a prolonged non-use, we recommend you strongly to keep the device shielded from the humidity.


#### **7. TECHNICAL SPECIFICATIONS**

|                           |                       |
|---------------------------|-----------------------|
| <b>Model</b>              | <b>CT 540</b>         |
| <b>Outside dimensions</b> | <b>450x530x345 mm</b> |
| <b>Weight</b>             | <b>21 Kg</b>          |
| <b>Power</b>              | <b>2300 W</b>         |
| <b>No quartz tube</b>     | <b>8</b>              |
| <b>Current</b>            | <b>10 A</b>           |
| <b>Voltage</b>            | <b>220-240 V ~</b>    |

Wires colours correspondence

Phase  
Neutral  
Earth

Brown/Black/Grey  
Blue  
Yellow-Green

The equipotential connection marked by this symbol  must be linked with the equipotential conductive connection of your installation by means of a minimum conduction of a 2.5 mm<sup>2</sup> section.

#### **8. NORMS AND LEGALS DISPOSALS**

The device is conform to :

IEC/EN 60335-1  
IEC/EN 60335-2-48  
EN 55014-1 + 55014-2  
EN 61000-3-2 + 61000-3-3

#### **9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE**

The device respects the directives:

2002/96/CE (DEEE) N°34270064800021  
2002/95/CE (ROHS)  
2006/95 CE  
2004/108 CE



#### **Reach rule**

Never put the device among household waste.

The device must be put down in a centre of recycling for the electric equipments.

The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

#### **10. GUARANTEE**

##### **Conditions of guarantee**

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.