

**INSTRUCTIONS FOR USE AND INSTALLATION  
DISH WARMERS  
DW 106 / DW 110**



**Made in France**

# DISH WARMERS

## DW 106 / DW 110

Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment

### **1. SECURITY INSTRUCTIONS**

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage. During the use of this appliance, fundamental circumspection of security must always be noticed, such as:


- Take into account the instructions to be systematically kept with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance.
- Never move the appliance when it is working or when the plates are still hot.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very important when the appliance is working. Always use control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the cord of electrical feeding in the contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- During use, look after not to obstruct hearings of aeration of the appliance
- To avoid any electric shock, never plunge the appliance, the cord or plug in water or quite other liquid.
- If the cord is harmed, it must be replaced by the producer, his after sale service or persons of similar skills to avoid any risk.
- Entrust compensations only to a skilled person.
- Use only spare parts of origin.
- Before cleaning the appliance, do not forget to disconnect it.

### **2. CONTENTS OF CARDBOARD PACKAGING**

Device: A dish-warmer

Accessories: - The present note

See exploded views for DW 106 / DW 110 at the end of the document

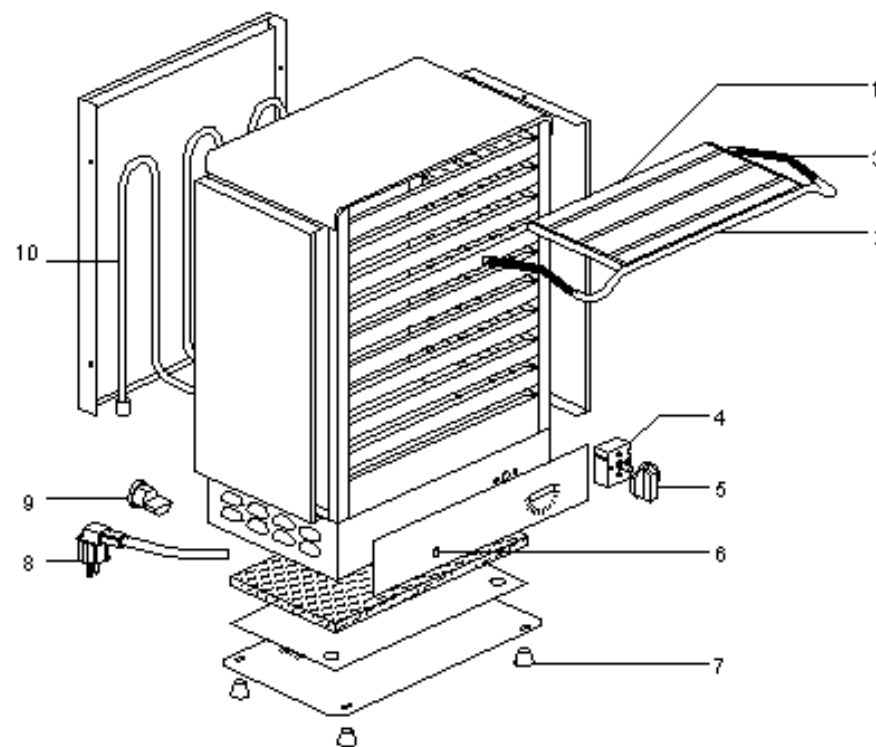

Nomenclature **DW 110**  
Spare parts **DW 110**

Rep	Code	Qty	Pièce	Spare part
1+2+3	H04051	10	Poignée complète	Handle assembly
4	A06018	1	Thermostat	Thermostat
5	A14111	1	Bouton	Knob
6	A08003	1	Voyant orange	Orange pilot light
7	A13003	4	Pied	Foot
8	C03006	1	Cordon avec prise	Cord with plug
9	A10001	1	Serre cable	Cord closer
10	D02003	1	Résistance	Heating element
3	F07009	20	Isolant poignée	Insulating handle


### 3. CONFORMITY OF USE

Use the device only to keep your dishes warm.

### 4. WAY OF FUNCTIONING

These dish warmers are fitted with 6 or 10 hot plates. Thanks to their high special alloying content, these heating plates boast optimal heat retention capacity and will keep your dishes warm individually. After 15 minutes preheating the hot plate unit provides a constant temperature to keep warm any dishes for 45 min.

To turn on and preheat the plates, just turn the thermostat control knob (n°1 on picture) on maximum position during 15 minutes. The pilot light ignites (n°2 on picture) during heating and switches off once selected temperature is reached. After 15 minutes, to keep warm the non-used plates, put the thermostat on desired position. When all the plates are used, we recommend you to turn off the device.

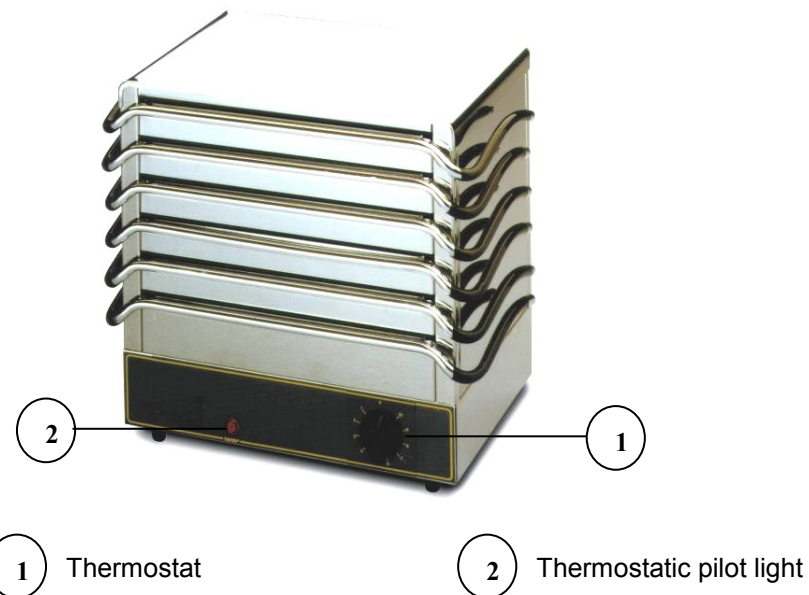

### 5. FUNCTIONING / MANIPULATION

#### a) Installation / assembly:

- Unpack carefully the device of its packaging.
- Place the machine on a plane and heatproof surface.
- Never place the device near a wall or near a partition makes of combustible materials even if it is very well isolated.

- A distance of minimum 10 cm with the partition or the wall is necessary.
- Remove the protective film around the machine and the cover that protects the plates

## **b) First starting:**

### ***First cleaning***

Clean the device before the first use. (See 6 Cleaning)

### ***Connection of the device***

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Make sure that every control knob is positioned on 0.
- Check that neither the cord nor the plug are damaged
- Unwind completely the electric power cable and connect it in a plug connected with the earth.
- The device is connected.

**NB:** in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person .

## **c) Use of device :**

### ***Elements of command and display***

Command/Display	Function
Thermostat (n°1 on picture)	On/Off + Temperature setting
Orange pilot light (n°2 on picture)	Machine is heating (pilot light on) Temperature reached (pilot light off)

### ***Putting on***

Turn on the thermostat control knob (n°1 on picture) on maximum position during 15 minutes : the orange pilot light (n°2 on picture) ignites. The machine is warming up. Once orange pilot light (n°4 on picture) is off, plates are hot.

### ***Temperature setting***

Set the temperature by positioning the thermostat (n°1 on picture) to the desired temperature.


### ***Stopping the appliance***

Set the thermostat control knob (n°1 on picture) on 0: the appliance is no longer functioning.

Let the device cool.

Disconnect the power cable.

Clean the appliance. (see 6. Cleaning)

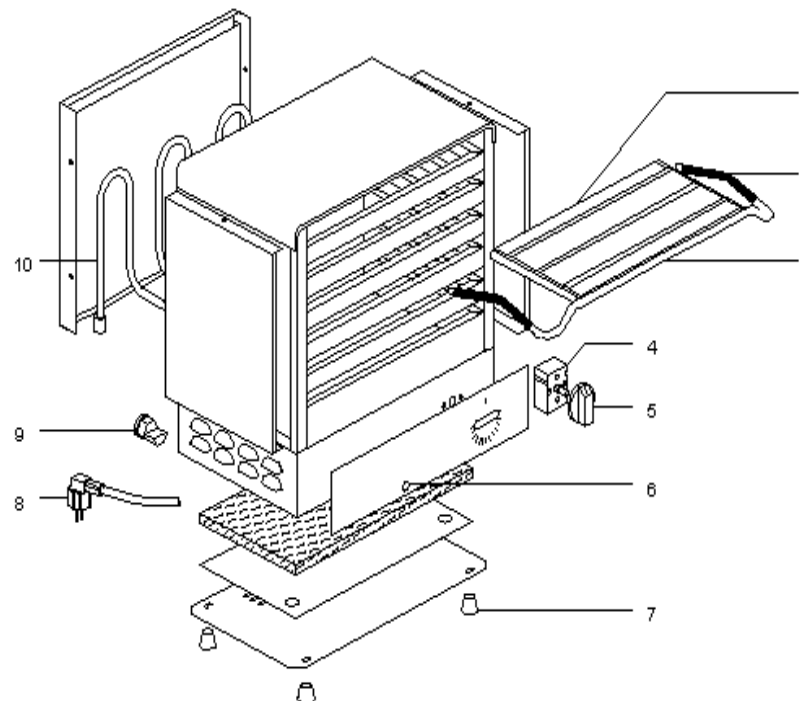

Nomenclature **DW 106**  
Spare parts **DW 106**

Rep	Code	Qty	Pièce	Spare part
1+2+3	H04051	6	Poignée complète	Handle assembly
4	A06018	1	Thermostat	Thermostat
5	A14111	1	Bouton	Knob
6	A08003	1	Voyant orange	Orange pilot light
7	A13003	4	Pied	Foot
8	C03006	1	Cordon avec prise	Cord with plug
9	A10001	1	Serre cable	Cord closer
10	D02004	1	Résistance	Heating element
3	F07009	12	Isolant poignée	Insulating handle

#### d) Breakdown / repair:

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

#### 6. CLEANING AND MAINTENANCE

Disconnect the device.

- Let cool completely the device before any technical intervention or cleaning.
- Be careful : plates remain hot a long time after stopping the appliance.
- For cleaning, only use non-abrasive products, clean regularly the external walls of your device with warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge.
- Never clean the device under a water jet, the infiltrations would risk to damage it in a irreparable way.
- Never immerse the device, the cord or the plug in the water or quite other liquid to avoid any electric shock.
- During a prolonged non-use, we recommend you strongly to keep the device shielded from the humidity.

#### 7. TECHNICAL SPECIFICATIONS

Models	DW 106	DW 110
<b>Outside dimensions</b>	400x215x335 mm	400x215x475 mm
<b>Weight</b>	14 Kg	25 Kg
<b>Power</b>	650 W	1300 W
<b>No element</b>	1	1
<b>Current</b>	2.8 A	5.6 A
<b>Voltage</b>	220-240 V ~	220-240 V ~

Wires colours correspondence

Phase	Brown / Black / Grey
Neutral	Blue
Earth	Yellow-Green

#### 8. NORMS AND LEGALS DISPOSALS

The device is conform to :

- IEC/EN 60335-1
- IEC/EN 60335-2-12
- EN 55014-1 +55014-2
- EN 61000-3-2 + 61000-3-3

## 9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives:

2002 / 96 / CE ( DEEE) N°34270064800021  
 2002 / 95 / CE ( ROHS)  
 2066/95 CE  
 2004/108 CE



### **Reach rule**

Never put the device among household waste.

The device must be put down in a centre of recycling for the electric equipments.

The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipments, you participate in a significant way in the environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

## 10. GUARANTEE

### Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

### Exclusion clauses of the guarantee

**Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.**

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.

